


OmniSLAM Capturer update steps

1. First, install and turn on the device. Connect the mobile terminal to the device's WiFi. Log in to the website 192.168.95.110:8889 to enter the Manager interface. As shown in the following figure:

Select English as the language.




2. Click "Config". You need to connect to a personal hotspot or external network WiFi. As shown in the following figure:

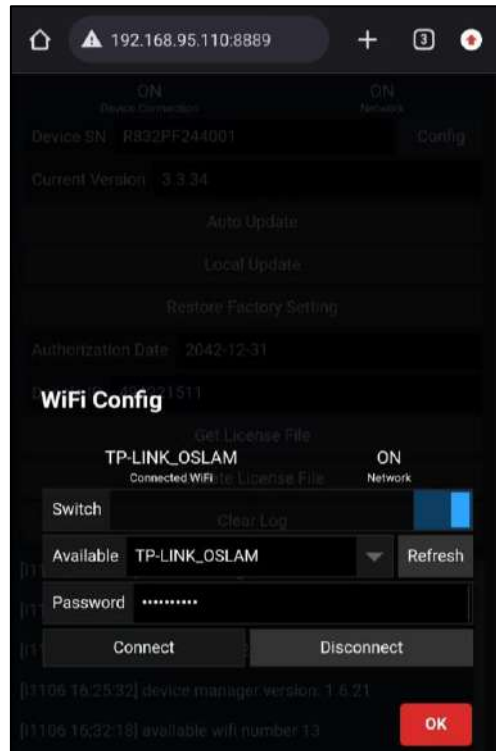

- Click "Auto Update". As shown in the following figure:




- There is a prompt for the latest version (currently the latest version is 3.4.3). Click "OK". As shown in the following figure:

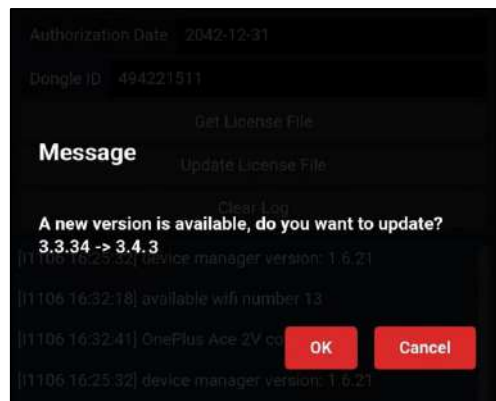

5. Wait for a few seconds, the update will be done.

(The current latest version is 3.4.3). As shown in the following figure:

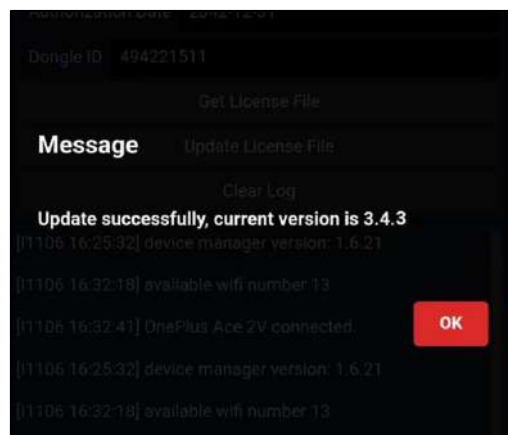

6. Reenter 192.168.95.110:8888 to the Capture interface. The version has been updated to the latest. As shown in the following figure:

The screenshot displays the OmniSLAM Technology interface. At the top, there are navigation tabs: System (selected), Project, Data, and Log. Below these, a status bar shows: OFF Network, 0.0% Battery, 812.0G Disk, 0/0.0/0/N RTK, NO DIFF, and 0G Camera. The main area features a dark background with a red dot in the center, representing the current position. On the right side, there are controls for 'Follow' (a square button), 'Points' (a checked checkbox), 'Grid' (a checked checkbox), and 'Version: 3.4.3'. At the bottom, there are two rows of status indicators: Time (0:0:0), Distance (0.00), LIDAR (0), IMU (0), GNSS/PPK/GCP (0/0/0), Camera (0), and Motor (0). Below this, there is a configuration section with 'Init System' and 'Config' buttons. The 'Config' section includes fields for Mode (set to CORS), IP (120.253.226.97), Name (test), Port (8001), PWD (....), Node (a dropdown menu), Get, and Save buttons. At the very bottom, there are 'Connect' and 'Disconnect' buttons.